



UK's best selling phone brand*

Quick Set-up and User Guide



BT1000
Digital Cordless Phone

Important – please read first

- Only use the line cord, power supply (item code 066773) and the rechargeable batteries supplied with your phone.
- Make sure that the power supply is connected to a known working socket.
- Connect your phone to the power supply and allow the batteries to charge for 24 hours before connecting the line cord to your telephone socket.
- To make sure you get the best range and reception from your handset, avoid interference by placing the base unit away from large metal objects such as fridge freezers and microwave ovens or electronic products such as computers and TVs.

 
Check box contents




Handset



Base



Telephone line cord
(already fitted)

 

Mains power adaptor
(item code 066773)



2 x AAA 500mAh
rechargeable batteries
(already in handset)

 
Contents for each additional handset (multipacks only)



Handset



Charger



Mains power adaptor
(item code 066773)



2 x AAA 500mAh
rechargeable batteries
(already in handset)

! IMPORTANT

Only use the mains power adaptors, cables and rechargeable batteries supplied in this box or this product might not work. Any replacement rechargeable batteries must be of the same type. BT accepts no responsibility for damage caused to your BT1000 if you use any other type of batteries.

Quick set-up guide

Where to put your phone


- Place the base within 3 metres of a mains power socket and 2 metres of a phone socket so the cables will reach.
- Make sure it's at least a metre away from other electrical appliances to avoid interference.
- Don't place the phone or base in a bathroom or other humid area.
- The product works by sending radio signals between the handset and base. The strength of the signal depends on where you position the base. Putting it as high as possible can help give you the best signal.

IMPORTANT

- Don't connect the phone line to a phone socket until the handset is fully charged.
- The base station should be plugged into the mains power socket all the time.

1 Plug in


1. Plug the mains power adaptor (item code 066773) into the base, with the cable clipped in the grooves provided.
2. Plug the other end of the power adaptor into the wall power socket and switch on.

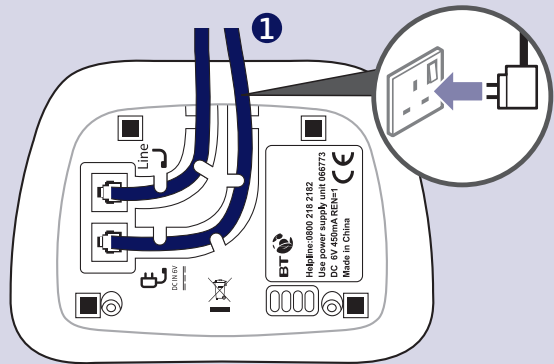

The phone line cord is already fitted but **don't** plug the other end into the wall socket yet.

2 Charge

1. Activate the batteries by pulling the plastic tab away from the back of the handset.

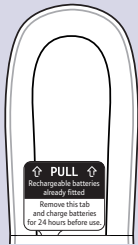

2. Place the handset on the base to charge.
3. After 24 hours, plug the phone line cord into the phone wall socket.

! IMPORTANT


We recommend that you charge the handset batteries for 24 hours before first use.

Talk/Standby time

Under ideal conditions, the handset batteries should give up to 12 hours talk time or 120 hours standby on a single charge. (This doesn't mean you can unplug the base or leave the handset for this length of time without charge).

Please note that new Ni-MH rechargeable batteries don't reach full capacity until they've been in normal use for several days.

Battery low warning

The  icon will flash and you will hear a warning beep every minute, to indicate that you need to recharge your handset before you can use it.


6 Quick set-up guide

Battery performance

- To keep the batteries in the best condition, leave the handset off the base for a few hours at a time.
- After charging your handset for the first time, subsequent charging time for the batteries is approximately 6–8 hours.
- The charge capacity of rechargeable batteries will go down over time, which will reduce the talk and standby time. Eventually they'll need replacing. For details on how to get replacement batteries, call the helpline on 0800 218 2182*.

Set up your additional handsets (multipacks only)

1. For additional handsets and chargers: plug the mains power adaptor into the back of the charger and plug the other end into the mains wall socket and switch on the power.

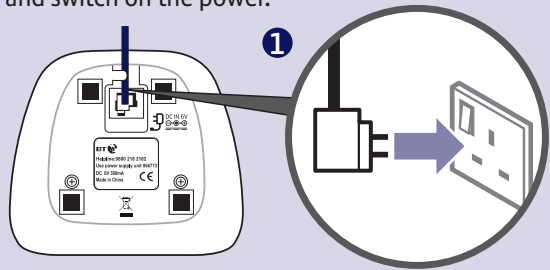

2. Activate the batteries as explained on page 5.
3. Place the handset on the charger to charge for 24 hours.

! If you ever need to remove the batteries, simply slide open the battery compartment cover and ease out the batteries.

3 Go!

Your BT1000 is now ready for you to use

- For help setting the date and time, go to page 28–29.
- For instructions on making a call, go to page 16.
- For help personalising your phone's settings, go to page 28.

Or, you may find the answer in the Help section on page 44 or see our online frequently asked questions at bt.com/producthelp. Alternatively, call the Helpline on 0800 218 2182*.

Using your BT1000 on a broadband line?

If so, you need to fit an ADSL microfilter between the phone line cord and the phone socket. You can get BT ADSL microfilters from bt.com/shop

If you use BT Infinity you will not need to use an ADSL microfilter. For other types of broadband, please check with your provider if a microfilter is required.

If you cannot find the answer to your problem in this user guide, then please call our free Helpline on 0800 218 2182*.

Our dedicated advisors are more likely to be able to help you than the retailer where you made your purchase.

In this guide

Getting to know your phone

Handset buttons	10
Handset display and icons	12
Base.....	13
Finding your way around your phone	14
Menu map.....	15

Using the phone

Switch the handset on or off.....	16
Make an external call	16
Preparatory dialling	16
End a call.....	16
Receive a call.....	16
Call Waiting	17
Incoming speech volume.....	17
Mute.....	18
Redial	18
View or dial a number in the redial list.....	18
Copy a redial number to your contacts	19
Delete a number in the redial list.....	19
Delete the entire redial list.....	19
Voicemail (BT 1571).....	20
Keypad lock.....	20
Turn the handset ringer on or off.....	20
Find handset (Paging)	20

Contacts

Store a contact name and number	21
Character map	21
View/dial a contact	22
Edit a contact entry.....	22
Delete a contact entry.....	23
Delete all contacts	23
View the contact memory status.....	23

Speed dial

Save a speed dial entry.....	24
Dial a speed dial entry	24

Caller Display and the Calls list

Caller Display.....	25
Calls list.....	25
Missed call notification.....	26
View/dial an entry in the calls list.....	26
View the call details	26
Save a Calls list entry to your contacts	27
Delete an entry in the Calls list.....	27
Delete the entire Calls list	27

Handset settings

Set the time format.....	28
Set the time.....	28
Set the date.....	29

Set an alarm or turn on or off..... 29

Stopping the alarm when it goes off..... 30

Set the handset ringtone for external or internal calls 31

Set the handset ringer volume 31

Turn the handset tones on or off 32

Change the handset name 32

Turn auto answer on or off..... 33

Select a base 33

Base settings

Set the base ringtone 34

Set the base ringer volume 34

Delete a handset..... 35

Change the system PIN..... 35

Reset your BT1000 36

BT Services

Pre-stored numbers in the BT Services menu..... 37

Call the BT1000 Helpline..... 37

Call BT 118 500 (Directory Enquiries)..... 37

Call Divert on..... 38

Call Divert off/check 38

Call Waiting on/off/check..... 38

Store a new service number..... 39

Dial a service number..... 39

Delete a service number or all service numbers 39

Using additional handsets

Register an additional handset..... 40

Make an internal call between handsets .. 41

Transfer a call..... 42

Make a conference call..... 43

Help 44

General information

Safety information 48

Cleaning..... 49

Environmental..... 49

Product disposal instructions 49

Guarantee 50

How many telephones can you have?..... 51

Connecting to a switchboard 51

R&TTE 51

Declaration of conformance 51

Getting to know your phone

Handset buttons

Home screen

Left option button

Press to enter the main menu, access sub menus and confirm options shown on the display above the button.

Redial/Vol/Up

From the home screen, press to enter the redial list, see page 18.
 In talk mode, press to increase the earpiece volume.
 In menu mode, press to scroll up through the options.

Contacts

Press to access your stored Contacts.

Talk


From the home screen, press to make and receive calls, see page 16.


Calls/Down

From the home screen, press to enter the Calls list, see page 25.
 In talk mode, press to decrease the earpiece volume.
 In menu mode, press to scroll down through the options.

1 (Speed dial)


From the home screen, press and hold to dial BT 1571 or your network's voicemail service.

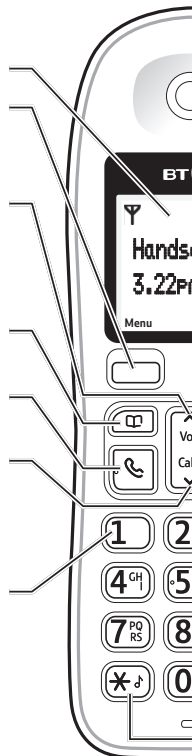

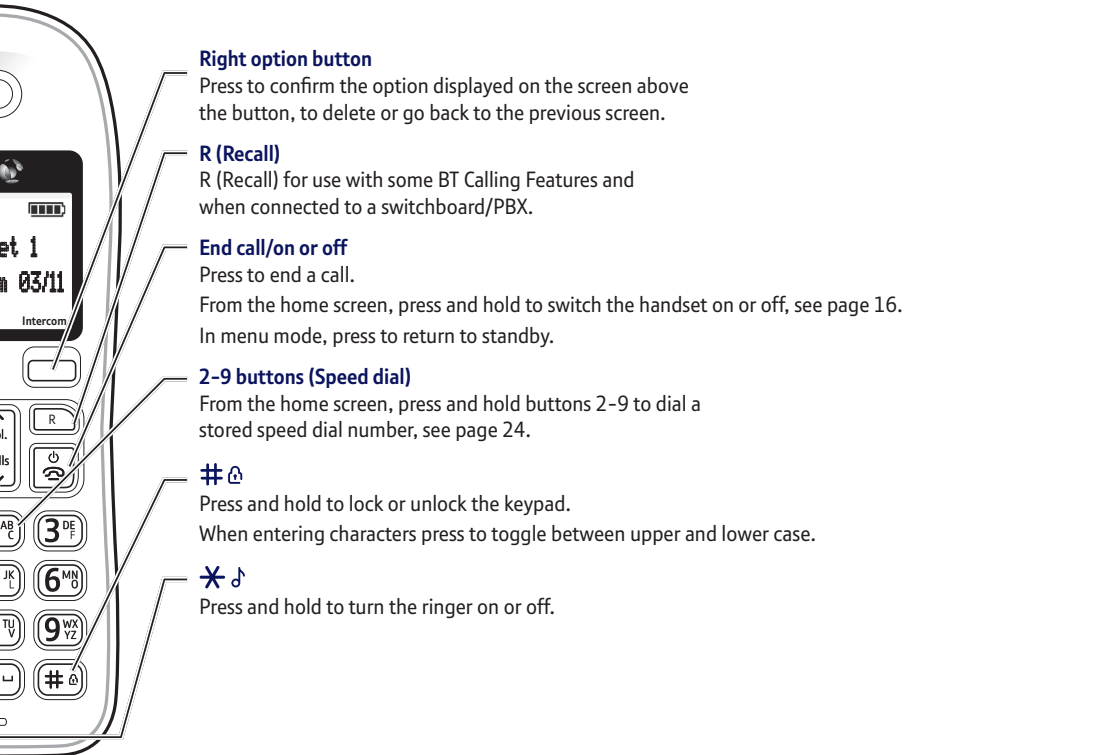

12 Getting to know your phone

Handset display and icons

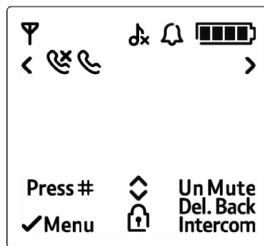

- Battery**
- Battery full
- Battery 3/4 full
- Battery 1/2 full
- Battery 1/4 full
- Low battery, needs charging

- Handset**
- Steady – handset in use
- Flashing – incoming call
- Off – answer machine is off

- Alarm**
- On – alarm set
- Flashing – alarm time reached

- Keypad lock**
- On – keypad lock on

- Ringer**
- Handset ringer turned off

- Antenna**
 - On – handset is in range of the base
 - Flashing – edge of range
 - Off – handset is out of range of the base
- Left/right**
 - Characters off the display to the left/right
 - Press key to scroll through the number
- Up/down**
 - Menu options exist above/below those shown on the display
- Calls list**
 - Shown to indicate missed calls in the calls list

Del. (Right soft key)

Press to clear a character when in entry mode or to stop the alarm

Back (Right soft key)

Press to go back to the previous menu level or cancel the current action

Mute/Unmute (Right soft key)

During a call, press to mute/unmute the call

Intercom (Right soft key)

From the home screen, press to make an internal call or access the intercom list

(Left soft key)

Press to confirm options

Menu (Left soft key)

Press to select menu options

Press# Press to see more details about the call


Base

Green In use light

On when the base is connected to the power. Flashes when the phone rings, during a call and during registration.

Red charging light

On when the handset is in the base charging.

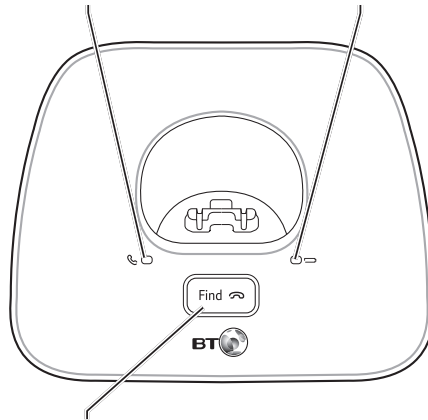

Find

Press to page/locate a handset also used for registering new handsets to the base.

Finding your way around your phone

Your BT1000 has an easy to use menu system.

Each menu has a list of options, which you can see on the menu map on the next page.

When the handset is switched on and at the home screen:

1. Select the **Menu** option by pressing the Left option button to open the main menu.
2. Use the **↑ Vol.** or **↓ Calls** button to scroll through the available options.
3. When the menu you want is displayed, select ✓ by pressing the Left option button or the **Back** option by pressing the Right option button to return to the previous screen.

To exit a menu and return to the home screen, press **Ⓚ**.

If no buttons are pressed for 30 seconds, the handset returns to the home screen automatically.



Menu map


Call list*	<ul style="list-style-type: none"> Details Store number Delete Delete all 	HS settings	<ul style="list-style-type: none"> Date and time Alarm Ringer Tones Handset name Auto answer Select base
Contacts*	<ul style="list-style-type: none"> Add View Edit Delete Delete all Capacity 	BT services	<ul style="list-style-type: none"> Helpdesk BT 118500 Divert on Divert off Divert check Call wait on Call wait off Call wait check Empty Empty
BS settings	<ul style="list-style-type: none"> Base ringer Ring volume Delete handset Change PIN 	Registration	Enter PIN
		Reset	Enter PIN

* You will need to press the Left soft key to open the sub menu.



Using the phone

Call timer

Your handset will automatically time your outgoing and incoming calls. The handset shows the length of time both during and for a few seconds after your call.

When you make a call, the green  In use light on the base comes on.

Out of range warning


The  icon on the display indicates when you are in range of the base. When the handset is out of range of the base, the  icon flashes and the display shows Searching. You need to move back within range of the base station.

If you move out of range when you're on a call, you'll lose your connection. The handset will automatically re-connect to the base when you move back within range.


Switch the handset on or off

1. Press and hold  until the handset switches On/Off.

Make an external call

1. Press .
2. When you hear the dial tone, enter the number.


Preparatory dialling


1. Enter the number first. If you make a mistake select Del. by pressing the Right option button to delete the last digit.
2. Press  to dial.

End a call

1. Press .

Receive a call




When you receive a call the phone rings, the  icon will flash and Incoming call will be displayed. The In use light on the base will also flash. If you've subscribed to a caller display service, the display shows the caller's number if it's available and also the caller's name if it matches an entry stored in your contacts list.

1. Press  to accept the call.

Call Waiting – instructions

If you've got a call waiting service and it is switched on, your phone will alert you to a second incoming call if you're already engaged on an external call.

To switch your call waiting service on or off, see page 38.


1. You'll hear the call waiting tone and if you also have caller display the display will show the number of the caller and the name if it matches an entry in your contacts.
2. Press  or select **Switch** by pressing the Left option button to answer the new call and your first caller is put on hold.
3. Press  or select **Switch** to toggle between the two callers.
4. Press  to hang up the current call.
5. If you hang up a current call, your phone will ring back to reconnect you to your original call if that caller is still connected.

Incoming speech volume

During a call, you can adjust the handset incoming speech volume. There are five levels. The default setting is Level 3.

Auto answer



If auto answer is set to On you can answer a call by lifting the handset off the base.



If auto answer is set to Off, you'll need to lift the handset off the base and press  too.

If you wish to turn the handset ringer off when the phone is ringing, select **Mute** by pressing the right option button. The display will show **Ringer mute**.

Numbers in the redial list are arranged in date/time order with the most recent at the top of the list.

If a redial number is stored in your Contacts, the name will be displayed instead of the number.

The  icon is displayed when the number is too long to be shown fully. Press  to scroll through the rest of the number.

1. During a call, press  or  to increase or decrease the volume. The first press will present the call volume screen so you can see the current volume level. Subsequent presses will change the volume, you will hear the volume level with each press.

Mute





During a call, you can talk to someone nearby without your caller hearing.

1. During a call, select **Mute** by pressing the Right option button. The display shows **Mute** and your caller can't hear you.
2. Select **Un Mute** to return to your caller.







Redial

Telephone numbers that you have called are saved in the Redial list. The Redial list holds up to 20 numbers.







View or dial a number in the redial list

1. Press  to open the redial list.
2. Press  or  to scroll through the list.
3. To dial a number, when it is highlighted, press .





Copy a redial number to your contacts

1. Press  to open the redial list.
2. Press  or  to scroll through to the number you want and select **Menu** by pressing the Left option button.
3. Store number is displayed, select .
4. Name is displayed. Enter a name and select .
5. The number is displayed, select  to confirm.


Delete a number in the redial list


1. Press  to open the redial list.
2. Press  or  to scroll through to the number you want to delete and select **Menu**.
3. Press  to display **Delete** and select .
4. **Delete?** is displayed, select  to confirm deletion.

Delete the entire redial list

1. Press  to open the redial list.
2. With any number in the redial list displayed, select **Menu**.
3. Press  to display **Delete All** and select .
4. **Delete all?** is displayed, select  to confirm deletion of the entire list, **List empty** is shown.

For help entering a name , see page 21.

When you press  to confirm a selection, you will hear a confirmation tone.


With the keypad locked, you can still call the emergency services on 999 and 112 and you can still answer incoming calls and operate the in call features as normal. When the call is ended, the  comes on again.

If you get an incoming call while you're paging a handset, the incoming call takes priority.

If the handset ringer is switched off on a handset, it will be temporarily switched back on so the handset can be found.

Paging calls can't be answered by a handset.


Voicemail (BT 1571)

1. If you have subscribed to BT Answer 1571 you can press and hold  to listen to your messages.



Keypad lock

You can lock the keypad so that it can't be used accidentally while you're carrying it around.

To lock the keypad

 

1. Press and hold  until the  is displayed.
2. To unlock, press and hold  again.

Turn the handset ringer on or off

1. Press and hold  to turn the handset ringer on or off. The  icon will be displayed when the ringer is off.

Find handset (Paging)





You can ring a handset to help find it.

1. Press  on the base. All handsets registered to the base will ring and display **Paging**.
2. To stop the ringing, press  on the base again or press any button on any handset. This will stop all handsets ringing.

Contacts

You can store up to 50 names and numbers in your list of contacts. Names can be up to 14 characters and numbers up to 24 digits.

Store a contact name and number




1. From the home screen, press . The first entry or **List empty** will be displayed.
2. Select **Menu** by pressing the Left option button. **Add** is displayed, select .
3. **Name** is displayed. Enter the name (see note opposite for help) and select .
4. **Number** is displayed. Enter the phone number and select  to save. You will hear the confirmation tone.

Character map

1	& . , ' ? ! @ 1
2	a b c 2 à á â ã ä å ç
3	d e f 3 é ê ë è é
4	g h i 4 î ï i
5	j k l 5 £
6	m n o 6 ö ô õ ò ó ø ñ
7	p q r s 7 \$ B
8	t u v 8 ü ù ú û
9	w x y z 9
0	space 0 + £ \$ # *
*	*
#	Changes text entry mode (upper, lower, sentence case)

If you try and store a contact when the contact list is full you will hear an error tone and **Contact list full** will be displayed. You will need to delete an entry before another can be stored.


Entering names

Use the keypad letters to enter names, e.g. to store Tom: Press  once to enter T. Press  three times to enter o. Press  once to enter m.

Writing tips

To delete the last digit/character entered, select **Del** by pressing the Right option button.

If the next letter is on the same button that you have just pressed, wait until the cursor moves to the right before trying to enter it.

Press  to switch between text entry modes: sentence case (Abc), upper case ABC, lower case (abc) or numeric (123).

Press  to insert a space.

22 Contacts

To enter a pause in a contact number

When storing a number, press and hold **0** in the place where you want the pause.

To enter a recall in a contact number

When storing a number, press and hold **R** in the place where you want the recall.

Searching alphabetically

Press the relevant keypad button, e.g. to search for a contact beginning with S, press **7** **RS** four times, then scroll **Calls** through the entries.

For help entering names see notes on page 21.








View/dial a contact

1. From the home screen, press **☎**. The first entry will be displayed.
2. Press **Calls** or **Vol.** to scroll through and view the entries.
3. To dial an entry, press **☎** when the entry is displayed.
4. To view the number for an entry, select **✓** when the entry is displayed.






Edit a contact entry

1. From the home screen, press **☎**. The first entry will be displayed.
2. Press **Calls** or **Vol.** to scroll to the entry you want to edit and select **✓**.
3. Press **Calls** to display **Edit** and select **✓**.
4. Edit the name by selecting **Del.** to delete characters and use the keypad to enter new ones, then select **✓**.
5. Edit the number using **Del.** to delete characters and use the keypad to enter new ones, then select **✓** to save.





Delete a contact entry

1. From the home screen, press . The first entry will be displayed.
2. Press  or  to scroll to the entry you want to delete and select .
3. Press  until **Delete** is displayed and select .
4. **Delete?** is displayed, select  to confirm.

Delete all contacts

1. From the home screen, press . The first entry will be displayed, select .
2. Press  until **Delete all** is displayed and select .
3. **Delete all?** is displayed, select  to confirm.

View the contact memory status

1. From the home screen, press . The first entry will be displayed, select .
2. Press  until **Capacity** is displayed and select .
3. The display will show the total number of contacts stored and the total amount of contacts that can be stored, e.g. 22/50 used.

When you delete all contacts they will only be deleted on the handset you are using. If you have more than one handset registered to the base and wish to delete all contacts from them all you will need to manually follow the “Delete all contacts” procedure using each handset.

Speed dial

You can allocate a phone number to each of the Speed dial buttons **1** to **9**. Button **1** is pre-programmed with 1571 but you can replace it with an entry of your choice. Once a Speed dial entry has been stored you can simply press and hold the Speed dial button to automatically dial the number stored under it. To delete or edit a Speed dial entry, simply follow the instructions to store a new number and this will overwrite the old entry.

Save or edit a Speed dial entry

1. From the home screen, enter the phone number you want to store.
2. Press and hold the Speed dial button **2** to **9** you want to store the number under. You will hear a confirmation tone once the number has been successfully stored.
3. To change any of the numbers that you have stored, just repeat 1 and 2 above.

Dial a Speed dial entry

1. Press and hold the Speed dial button **1** to **9** under which the entry you want to dial is stored. The number will be dialled automatically.

Caller Display and the Calls list

Caller Display

If you've subscribed to a Caller Display service, you'll be able to see your caller's number on your handset display (provided it's not withheld) before you answer a call. If your caller's name is stored in your contacts list and it matches the number calling, you'll see the caller's name and number on the display. If you haven't subscribed to a Caller Display service **Incoming call** will be displayed when you receive a call.

Calls list

The Calls list holds up to 50 numbers. The date and time of the call is also stored if available. Both answered and unanswered calls are stored.

Calls are listed in chronological order with the most recently received call at the top of the list. When the list is full and a new call is received, the oldest entry will be deleted automatically. The Calls list can hold numbers up to 24 digits and names up to 14 characters.

You'll need to subscribe to your network provider's Caller Display service for this feature to work. You might have to pay a fee. For more information on BT Calling Features, call BT free on 0800 800 150.

To make sure the caller's name is displayed, make sure you've stored the full telephone number in your contacts list, including the dialling code.

There are some incoming calls where a number is not displayed and a network message is recorded instead:

Unavailable = number is unavailable

Withheld = number has been withheld



International = international number

Operator = call from the operator

 
Payphone = call from a payphone

Ringback = a ringback call





26 Caller Display and the Calls list

When the Calls list is open, press  to scroll from the newest call to the oldest, or press  to scroll from the oldest call to the newest.






Missed call notification

When incoming calls have been missed the number of new calls will be shown e.g. 3 new calls. The notifications can be cleared by viewing all of the handsets registered to the base. The  will still be presented for missed calls in the calls list, so that you can differentiate between calls in the calls list.








View/dial an entry in the Calls list

1. Press  button to display Calls list.
2. The most recent entry is at the top of the list. (If there are no entries List empty will be displayed).
3. Press  or  to scroll through and view the list.
4. When the entry you want is displayed, press .







View the call details

1. Press  button to display Calls list.
2. Press  or  to scroll through to the entry you want and select **Menu**.
3. Details is displayed, select . Details of the date and time of the call will be displayed.
4. Press  to see more details about the call.





Save a Calls list entry to your contacts

1. Press  button to display Calls list.
2. Press  or  to scroll through to the entry you want and select **Menu**.
3. Press  to display Store number and select .
4. Name is displayed. Enter a name and select .
5. The number is displayed, select  to confirm.

Delete an entry in the Calls list

1. Press  button to display Calls list.
2. Press  or  to scroll through to the entry you want to delete and select **Menu**.
3. Press  to display Delete and select .
4. Delete? is displayed, select  to confirm.




Delete the entire Calls list

1. Press  button to display Calls list.
2. With any entry displayed, select **Menu**.
3. Press  to display Delete all and select .
4. Delete all? is displayed, select  to confirm.







Handset settings

The default time format is 24 hour.













Set the time format

1. Select **Menu**, scroll  to HS settings and select ✓.
2. Date and time is displayed, select ✓.
3. Time format is displayed, select ✓.
4. Press  or  to display either 12 hour or 24 hour and select ✓ to confirm. You will hear a confirmation tone.

Set the time
















 
1. Select **Menu**, scroll  to HS settings and select ✓.
2. Date and time is displayed, select ✓.
3. Press  to display Set time and select ✓.
4. The current time set is displayed and the cursor will blink at the first digit. Enter the time in 24 hour format, 2 digits for the hour and 2 for the minute (e.g. for 10.54pm, press , , , ) then select ✓. You will hear a confirmation tone.

Set the date

1. Select **Menu**, scroll  to **HS settings** and select .
2. **Date and time** is displayed, select .
3. Press  to display **Set date** and select .
4. The current date set is displayed and the cursor will blink at the first digit. Enter the date in dd-mm-yy format, 2 digits for the day, 2 for the month and 2 for the year (e.g. for 5th January 2013, press (, , , , , ) then select . You will hear a confirmation tone.


Set an alarm or turn on or off

If you didn't set the time and date when you first set-up your phone then you will need to do so before you can set an alarm, see page 44-45.

1. Select **Menu**, scroll  to **HS settings** and select .
2. Press  to display **Alarm** and select .
3.  or  to display either **On** or **Off** and select .
4. If you select **On**, enter the time in 24 hour format (e.g. for 7.30am press (, , , ) and select .
5. You now have the option to turn the Snooze function on or off, press  or  to display **On** or **Off** and select . The  will be displayed on the idle screen to indicate that the alarm has been set.


If you turn the snooze function on, when the alarm sounds and you press any button to stop it, the alarm will turn off for 10 minutes and then sound again after 10 minutes.


Stopping the alarm when it goes off

When the alarm goes off, it will sound at the handset volume level set. If the handset ringer has been set to Off, the alarm will still sound at level 3. The  icon and Alarm On will flash on the display.

To stop the alarm, press any button on the handset (even if the keypad lock has been turned on).











If snooze has been turned on and you press any button to stop the alarm, snooze will be activated for 10 minutes, it will sound again at the end of the snooze period.

To stop the alarm and the snooze function, press and hold .











If an alarm goes off during a call, the  icon and Alarm On will flash on the display and you will hear a beep in the earpiece. The alarm will not sound during ringing or paging.

The alarm is set for a single event only, so once the alarm has been stopped the alarm time will need to be set again if required.

Set the handset ringtone for external or internal calls


1. Select **Menu**, scroll  to **HS settings** and select .
2. Press  to display **Ringer** and select .
3. Press  or  to display either **External ring** or **Internal ring** and select . The current ringtone will be played.
4. Press  or  to hear the different ringtones and select  to save your choice. You will hear a confirmation tone.


Set the handset ringer volume

1. Select **Menu**, scroll  to **HS settings** and select .
2. Press  to display **Ringer** and select .
3. Press  or  to display **Ringer volume** and select . The current ringtone will be played at the current volume setting.
4. Press  or  to display and hear the different volume levels or **Off** and select  to save your choice. You will hear a confirmation tone.

Choose from 5 handset ringtones. The default external ringtone is Melody 1 and the internal ringtone is Melody 2.

There are 5 handset ringer volume levels plus Volume Off. The default setting is volume level 5.

If you turn the ringer off, the  icon will be displayed on the standby screen.

As a quick way to turn the handset ringer off, press and hold .

32 Handset settings

There are three handset tones: Key beeps, Battery low and Out of range. You can turn these on or off, the default setting is On.














Key beeps: when turned on, you will hear a beep after each button press.

Battery low: when turned on, you will hear a tone when the battery is low.






Out of range: when turned on, you will hear a tone when the handset is out of range with the base.

A handset name can be a maximum of 12 characters. If you name your handset, the handset number will still be displayed on the idle screen.








Turn the handset tones on or off

1. Select **Menu**, scroll  to HS settings and select .
2. Press  to display Tones and select .
3. Press  or  to display Ringer volume and select .
4. Press  or  to select the tone you want: Key beeps, Battery low or Out of range and select .
5. Press  or  to display either On or Off and select  to confirm. You will hear a confirmation tone.








Change the handset name


1. Select **Menu**, scroll  to HS settings and select .
2. Press  to display Handset name and select .
3. The current handset name is displayed. Select **Del.** to delete characters and use the keypad to enter the new name, then select . You will hear a confirmation tone.

Turn auto answer on or off

1. Select **Menu**, scroll  to **HS settings** and select .
2. Press  to display **Auto answer** and select .
3. Press  or  to display either **On** or **Off** and select  to confirm. You will hear a confirmation tone.

Select a base

1. Select **Menu**, scroll  to **HS settings** and select .
2. Press  to display **Select base** and select . The current base in use will have a * next to it.
3. Press  or  to display the base you want and select  to confirm.

If auto answer is set to On you can answer a call by lifting the handset off the base. If it's set to Off, you'll need to lift the handset off the base and then press .

The default setting is Auto answer On.







Base settings

Choose from 5 base ringtones.








The default base ringtone is Melody 1.

There are 5 base ringer volume levels plus Volume Off. The default setting is volume level 5.

Set the base ringtone

 

 



 

1. Select **Menu**, scroll  to **BS settings** and select .
2. **Base ringer** is displayed, select . The current ringtone will be played.
3. Press  or  to hear the different ringtones and select  to save your choice. You will hear a confirmation tone.

Set the base ringer volume








1. Select **Menu**, scroll  to **BS settings** and select .
2. Press  to display **Ringer volume** and select . The current ringtone will be played at the current volume setting.
3. Press  or  to display and hear the different volume levels or Off and select  to save your choice. You will hear a confirmation tone.

Delete a handset

Deleting a handset will de-register it from the BT1000 base station. For more information on using additional handsets and to register a handset, see page 40.


1. Select **Menu**, scroll  to **BS settings** and select .
2. Press  to display **Delete handset** and select .
3. **Enter PIN?** is displayed. Enter the 4 digit system PIN and select .
4. All handsets registered to the base will be displayed. Press  or  to select the handset you want to delete and select .

Change the system PIN

1. Select **Menu**, scroll  to **BS settings** and select .
2. Press  to display **Change PIN** and select .
3. **Old PIN?** is displayed. Enter the existing 4 digit PIN and select .
4. **New PIN?** is displayed. Enter a new 4 digit PIN and select .
5. **Confirm?** is displayed. Enter the new PIN again and select . You will hear a confirmation tone.

The default 4 digit system PIN is 0000.

You cannot delete the handset you are using to carry out this action.

Once a handset is deleted it will be removed from the list of registered handsets and the  icon will disappear from the display and **Register** will be shown.

The default 4 digit system PIN is 0000.






If you enter a digit incorrectly, select **Del.** to delete it.

The default 4 digit system PIN is 0000.

If you enter a digit incorrectly, select Del to delete it.

Reset your BT1000

You can reset your BT1000 back to the factory default settings. All settings will be reset but it will not delete your stored contact entries.

1. Select **Menu**, scroll  or  to **Reset** and select .
2. Enter PIN is displayed. Enter the 4 digit system PIN and select .
3. **Reset settings?** is displayed, select  to confirm. The display will return to the idle screen and your BT1000's default settings will be restored.




BT Services

You can easily call a range of useful pre-stored numbers and BT Calling Features using the BT Services menu. There are two empty entries in the menu where you can store your own numbers if you wish to.

Pre-stored numbers in the BT Services menu

Helpdesk	Call wait on
BT 118500	Call wait off
Divert on	Call wait chk
Divert off	Empty
Divert check	Empty

Call the BT 1500 Helpline

1. Select **Menu**, scroll  to BT services and select .
2. Helpdesk is displayed, press  to call the BT1000 Helpline.

Call BT 118500 (Directory Enquiries)

1. Select **Menu**, scroll  to BT services and select .
2. Press  to display BT 118500 and press  to call.

You need to subscribe to the specific BT Calling Feature to be able to use some of these services. You might have to pay a fee.

For more details on BT's Calling Features, go to bt.com/callingfeatures, refer to the user guide supplied when you subscribed to the services of your choice or call BT free on 0800 800 150.




If you're not connected to the BT network, some of these features may not be available. Call diversion services might allow other divert options. Please contact your telephone network provider for details.

Call Diversion will divert incoming calls to another number of your choice.




If you always divert your calls to the same number, you can change the service number for convenience. Follow steps 1 and 2 opposite and select ✓. Scroll to Edit, select ✓ twice and after the existing number enter the number you usually divert to followed by # (do not delete any of the digits that are already there). Select ✓ to confirm. Then, when you call 'Divert on', your divert will be set up without having to enter any additional digits.

Call Waiting lets you know if another person is trying to call you while you're on another call. If a second caller rings, you will hear a beep in the handset earpiece. If you've subscribed to Caller Display, the display will show the caller's details as well.




Call Divert on

1. Select **Menu**, scroll  to BT services and select ✓.
2. Press  to display Divert on and press  to call the service and then enter the number you want to divert calls to.


 
Call Divert off/check

1. Select **Menu**, scroll  to BT services and select ✓.
2. Press  to display either Divert off or Divert check and press  to call the service. Follow the spoken instructions or listen for confirmation/status of your instructions.




Call Waiting on/off/check

1. Select **Menu**, scroll  to BT services and select ✓.
2. Press  to display either Call wait on, Call wait off or Call wait chk and press  to call the service. Follow the spoken instructions or listen for confirmation/status of your instructions.

 


Store a new service number

1. Select **Menu**, scroll  to **BT services** and select ✓.
2. Press  to display **Empty** and select ✓.
3. **Add** is displayed, select ✓.
4. Enter the name you want and select ✓.
5. Enter the number you want and select ✓.
The number is saved.

Dial a service number

1. Select **Menu**, scroll  to **BT services** and select ✓.
2. Scroll  to display the entry you want to dial and press .

Delete a service number or all service numbers

1. Select **Menu**, scroll  to **BT services** and select ✓.
2. Scroll  to display the entry you want to delete (or any entry if you want to delete all entries) and select ✓.
3. Press  to display either **Delete** or **Delete All** and select ✓. If prompted, select ✓ again to confirm.

You can also scroll down to display either **View** or **Edit** to view and edit stored service numbers.

If you accidentally delete all the service numbers you can restore them by resetting the phone, see page 36.

Using additional handsets

If there are already five handsets registered to the base, the registration will fail. You must de-register another handset before you can register the new one, see “Delete a handset” on page 35 for instructions.

The default 4 digit system PIN is 0000.

If you enter a digit incorrectly, select **Del.** to delete it.


 






You have 2 minutes to complete the registration process.

If registration isn't successful the first time, please try again incase the base registration period ran out of time.

You can register up to five GAP compliant handsets to your BT1000 base to extend your phone system without needing to install telephone extension sockets for each new phone.

 If you've bought a BT1000 multiple pack, all additional handsets come pre-registered to the base. However, if you purchase an additional handset separately, you must register it to your BT1000 base (as shown on Page 6) before it can be used. If a handset becomes un-registered it will need to be registered to the base again.

Register an additional handset

1. Select **Menu**, scroll  or  to **Registration** and select .
2. Scroll  or  to select the base you want and select .
3. **Enter PIN** is displayed. Enter the 4 digit system PIN and select . The handset will display **Please wait**.
4. Press and hold the  button on the base for approximately 5 seconds until you hear a long beep and the green **In use** light begins to flash.
5. Once registration is successful the handset will display **Handset x** (with x being the assigned next available handset number).

Make an internal call between handsets

If you have more than one handset registered to the base, you can make internal calls between two handsets.

1. From the home screen, select **Intercom** by pressing the Right option button. If you only have one other handset registered to the base, the other handset will be called automatically. If you have more than one handset registered all handset numbers will be displayed. Enter the handset number you want to call or to call all handsets, press **9%**.
2. The other handset(s) will ring and display your handset number so they know who is calling. When a handset answers hold your conversation as normal.
3. Press **Ⓜ** to end the call.

Registering another make of handset to your BT1000 base

If you want to register another make of handset (i.e. not a BT1000 handset) to your BT1000 base you will need to follow the Registration instructions that came with the handset first and then continue with the base part of the registration procedure (as shown in point 3 on page 40). Please note that registering other types of handset will only provide limited compatibility i.e. you may only be able to make and receive calls on the additional handset.





If two handsets are engaged on an internal call and an external incoming call is received, beeps will be emitted in the earpiece of both handsets and the incoming call details will be shown on the handset display. The internal call has to be ended before the external call can be answered.

If you only have one other handset registered to the base, the other handset will be called automatically.

If the other handset is unavailable your handset will display Handset not available and you will be returned to the external caller.






Transfer a call

You can transfer an external call to another handset registered to the base.

1. During an external call, select **Menu**, by pressing the Left option button then scroll  until **Intercom** is displayed and select .
2. All handset numbers registered will be displayed. Enter the handset number you want to transfer the call to or press  to call all handsets. The other handset(s) will ring and display your handset number. Your external caller will be put on hold and hear music.
3. When the other handset answers, press  to transfer the call.

Make a conference call

Using your handset, you can hold a conference call with an external caller and other internal handsets registered to the base. Or, you can hold an internal conference call between all the handsets registered to the base.

1. During an external call, select **Menu**, by pressing the Left option button then scroll down until **Intercom** is displayed and select .
2. All handset numbers registered will be displayed. Enter the handset number you want to join the conference call or press  to call all handsets. The other handset(s) will ring and display your handset number. Your external caller will be put on hold and hear music.
3. The other handset(s) should answer by pressing .
4. Press and hold  for 2 seconds, the display will show **Conference**. Your external caller and internal handset(s) will all be connected to the conference call.
5. Any caller can leave the conference by pressing .

Help

Phone doesn't work

- Have you activated the batteries correctly? See page 5.
- Check that the mains power is correctly connected.

No dial tone

- Is the telephone cord plugged into the base and phone wall socket?
- Check that the mains power is correctly connected.
- Only use the telephone cord supplied with this phone.

Can't make or receive calls

- Check that the mains power is correctly connected.
- The batteries may need recharging.
- Has there been a power cut? If so, place the handset back on the base for ten seconds and try again. If it still doesn't work, disconnect the batteries and mains power for ten minutes, then reconnect and try again.

Handset doesn't ring

- The ringer volume may be switched off, see page 31.
- Check that the mains power is correctly connected.
- Make sure the handset is registered to the base, see page 40.

No display

- The batteries may be flat, dead or incorrectly inserted.
- Recharge or replace the batteries.

icon flashes

- Make sure the handset is registered to the base, see page 40.
- Check that the mains power is correctly connected.
- Check that the handset is within range of the base.
- If the batteries are low, place the handset on the base/charger to recharge.

icon not scrolling

- Try cleaning the charging contacts, see page 49.
- Check that the mains power is correctly connected.

You hear the busy tone when you press

- Make sure the handset is in range of the base.
- Another handset registered to your BT1000 base may be on the line.

No Caller Display number/name displayed

- Have you subscribed to a Caller Display service from your network provider? See page 25.
- The caller may have withheld their number.
- An exact name/number match was not found in your contacts. Check that you've stored the full STD dialling code.

Can't register a handset to a base

- You can register up to five handsets to your BT1000 base and you can register your BT1000 handset to up to four bases. Check that you've not exceeded the limits.
- Check that you've entered the correct system PIN (default PIN 0000).
- Check that you're at least one metre away from other electrical equipment to avoid interference when registering.

Base unit does not ring, but the lights are on

- Have you connected the telephone line cord correctly?
- Is the base ringer set to off? See page 34.
- You may have a faulty line or socket. Try using another socket or line. If you are a BT customer then please call 0800 800 151 or your network provider if you still have problems.

Buzzing noise on my phone or on other electrical equipment nearby

- Sometimes your BT1000 can interfere with other electrical equipment if it's placed too close. We recommend that you place your BT1000 at least one metre away from electrical appliances or metal obstructions to avoid any risk of interference.

Customer Helpline

If you're still having problems, call us on **0800 218 2182*** or go to **bt.com/producthelp**

General sales enquiries

- BT Residential lines – call **150**. BT Business lines – call **152**.
- For non BT line customers, call **0800 800 150** (residential) or **0800 800 152** (business).
- Additional handsets are available from the Helpdesk on **0800 218 2182***.

Billing enquiries

Please see the phone number shown on your BT bill.

General information

Important

You won't be able to call 999 from this phone if there's a power cut, so make sure you've got another way to call for help in an emergency.

This product is intended for connection to analogue public switched telephone networks and private switchboards in the United Kingdom.

Replacing the handset batteries

After a time, you might find that the handset batteries run out of charge more quickly. This is a standard sign of wear and the batteries will need replacing.

1. Open the battery compartment cover.
2. Lift the battery out and remove the batteries.
Replace with two new AAA Ni-MH 500mAh rechargeable batteries.
3. Replace the battery compartment cover.

	Manufacturer	Model	Rating
Battery	Corun	NI-MHAAAJ500	500mAh
	GPI	VT50AAAHC	500mAh

Caution

Don't immerse batteries in water, throw them into a fire or dispose of them with ordinary domestic refuse.

BT accepts no responsibility for damage caused to your BT1000 by using any other types of batteries.

There is a risk of explosion if incorrect batteries are fitted.

Safety information

- Only use the power supply suitable for the BT1000. Using an unauthorised power supply will invalidate your guarantee and may damage the phone. The item code for the base mains power supply is 066773 . If you've bought a multiple pack, the item code for the charger mains power supply is 066773.
- Use only the approved rechargeable batteries supplied. Spare rechargeable batteries are available from the BT1000 Helpline on 0800 218 2182*.
- Don't open the handset (except to replace the handset batteries) or the base. This could expose you to high voltages or other risks. Contact the Helpline on 0800 218 2182* for all repairs.
- If the keypad is locked, it is still possible to make calls, to 999 and 112 emergency numbers.
- Radio signal transmitted between the handset and base may cause interference to hearing aids.
- It is recommended that advice from a qualified expert be sought before using this product in the vicinity of emergency/intensive care medical equipment.
- It is recommended that if you have a pacemaker fitted you check with a medical expert before using this product.
- Your product may interfere with other electrical equipment, e.g. TV and radio sets, clock/alarms and computers if placed too close.
- It is recommended that you place your product at least one metre away from such appliances to minimise any risk of interference.

- Never dispose of batteries in a fire. There is a serious risk of explosion and/or the release of highly toxic chemicals.

Cleaning

- Clean the handset and base (or charger) with a damp (not wet) cloth, or an anti-static wipe. Never use household polish as this will damage the product. Never use a dry cloth as this may cause a static shock.

Environmental

- Do not expose to direct sunlight.
- The handset may become warm when the batteries are being charged or during prolonged periods of use. This is normal. However, we recommend that to avoid damage you do not place the product on antique/veneered wood.
- Do not stand your product on carpets or other surfaces which generate fibres, or place it in locations preventing the free flow of air over its surfaces.
- Do not submerge any part of your product in water and do not use it in damp or humid conditions, such as bathrooms.
- Do not expose your product to fire, explosive or other hazardous conditions.
- There is a slight chance your phone could be damaged by an electrical storm. We recommend that you unplug the power and telephone line cord during an electrical storm.

Product disposal instructions

The symbol shown here and on the product means that the product is classed as Electrical or Electronic Equipment and should not be disposed with other household or commercial waste at the end of its working life.



The Waste of Electrical and Electronic Equipment (WEEE) Directive (2002/96/EC) has been put in place to recycle products using best available recovery and recycling techniques to minimize the impact on the environment, treat any hazardous substances and avoid the increasing landfill.

Product disposal instructions for residential users

When you have no further use for this phone, please remove any batteries and dispose of them and the product as per your local authority's recycling processes. For more information please contact your local authority or the retailer where the product was purchased.

Product disposal instructions for business users

Business users should contact their suppliers and check the terms and conditions of the purchase contract and ensure that this product is not mixed with other commercial waste for disposal.

Guarantee

Your BT1000 is guaranteed for 12 months from the date of purchase.

Subject to the terms listed below, the guarantee will provide for the repair of, or at BT's or its agent's discretion, the option to replace the BT1000 or any component thereof, (other than batteries), which is identified as faulty or below standard, or as a result of inferior workmanship or materials. Products over 28 days old from the date of purchase may be replaced with a refurbished or repaired product.

Guarantee conditions

- The guarantee shall only apply to defects that occur within the 12 month guarantee period.
- Proof of purchase is provided.
- The equipment is returned to BT or its agent as instructed.
- This guarantee doesn't cover any faults or defects caused by accidents, misuse, fair wear and tear, neglect, tampering with the equipment, or any attempt at adjustment or repair other than through approved agents.
- This guarantee does not affect your statutory rights.

Within the 12 month guarantee period

Prior to returning your product, please read the Help section beginning on page 44 or contact the BT1000 Helpline on **0800 218 2182***. Additional answers to frequently asked questions are available from **bt.com/producthelp**

In the unlikely event of a defect occurring, the helpdesk will issue a Fault Reference Authorisation (FRA) number and instructions for replacement or repair. Please note you will need the FRA number before returning the product. This does not affect your statutory rights.

Outside of the 12 month guarantee period

If your product needs repair after the guarantee period has ended, the repair must meet the approval requirements for connection to the telephone network. We recommend that you contact BT's recommended repair agent Discount Communications on **0800 980 8999** or a local qualified repairer.

Returning your phone

If the Helpline is unable to remedy your problem they will issue a Fault Reference Authorisation number and ask you to return the product to your original place of purchase. Where possible, pack the product in its original packaging. Please remember to include all parts, including the line cords, power supply units and the original batteries.

Technical information

How many telephones can I have?

All items of telephone equipment have a Ringer Equivalence Number (REN), which is used to calculate the number of items which may be connected to any one telephone line. Your BT1000 has a REN of 1. A total REN of 4 is allowed. If the total REN of 4 is exceeded, the telephones may not ring. With different telephone types there is no guarantee of ringing, even when the REN is less than 4.

Any additional handsets and chargers that you register have a REN of 0.

Connecting to a switchboard

Switchboard compatibility

This telephone may be connected to most types of switchboard, however in the event of any difficulties, consult your switchboard Service Provider.

Recall (R)

Recall is used when connected to certain switchboards/PBXs and some BT Calling Features, or those services available via your network provider. The BT1000 supports time break recall but not earth loop recall.

R&TTE

This product is intended for use within the UK for connection to the public telephone network and compatible switchboards.

This equipment complies with the essential requirements for the Radio Equipment and Telecommunications Terminal Equipment Directive (1999/5/EC).

Declaration of Conformance

Hereby, BT declares that this BT1000 is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

If you would like a copy of the Declaration of Conformance, please visit bt.com/producthelp

For your records

Date of purchase:

Place of purchase:

For guarantee purposes, proof of purchase is required, so please keep your receipt.

Enter your base system PIN here:

[/ / /]

For a Better Future

We're always looking to make our products last longer and use less power, so we don't have such a big impact on the environment.

To find out about what we are doing, visit
bt.com/betterfuture

Offices worldwide

The services described in this publication are subject to availability and may be modified from time to time. Services and equipment are provided subject to British Telecommunications plc's respective standard conditions of contract. Nothing in this publication forms any part of any contract.

© British Telecommunications plc 2012.
Registered Office: 81 Newgate Street, London EC1A 7AJ.
Registered in England No. 1800000.
Printed in China.

Designed by The Art & Design Partnership

Available in other formats including braille, large print or audio CD.
If you would like a copy, please call 0800 218 2182*.

† UK's No. 1 Phone Brand based on sales. Source GFK RT UK,
Landline Phone sales, Volume and Value Sales. Jan 2000-Aug 2012.

* Calls made from within the UK mainland network are free.
Mobile and international call costs may vary.

BT1000 (10/12) Issue 1

