




BT Home SmartPhone User Guide




Touch screen home phone with web browsing

1 Plug in and charge

1

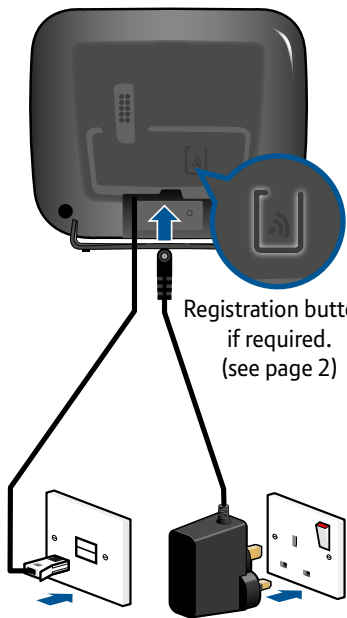

2

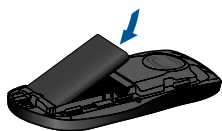

Insert battery



Clip cover on, pressing firmly around edges to fasten

3

Charger base




4



You can also plug the USB charger into the bottom left of your Home SmartPhone handset to charge it directly.

2 Turn on


When the screen is off, press the small button on the side of your SmartPhone to turn it on. The handset vibrates and the screen turns on.

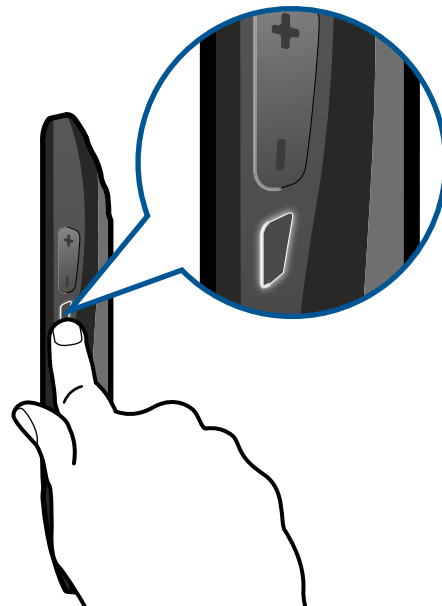


3 Set up your phone

When you set up your Home SmartPhone for the first time you'll be taken through the following steps.

Registration

1 If  is shown then your handset is successfully registered to the base.

If  is shown then your handset has become de-registered and you should follow the on screen steps to re-register, making sure you press and hold the button on the back of the base. (See page 1 for button location)

2 Press **Next**.

Select Wi-Fi network

3 Touch **Configure** on the Wi-Fi settings window.




4 Select your usual Wi-Fi network name.

Slide your finger up and down to see more networks.




5 Touch the **Password** box to enter the Wi-Fi password or key for that network.

You can select **Show password**. If you make a mistake, touch the  icon to delete.

Touch **Done** or .



6 Touch **Connect**.

When you're connected press .

7 Press **Next**.



Set date and time

8 To change the date and time press **Set**.



9 Adjust the date or time using + or -. Press **OK** to confirm.



10 Press **Finish** to return to the Home screen.

If you need to change these settings in the future, they can be accessed through the Settings menu.

4 Learn about your home screen

Notification panel
Touch and slide down to show Answer phone messages, missed calls, updates and calls in progress.

Screen tips
Touch to learn more.

Update
Shows when new software is available.

Wallpaper
Choose from the settings menu.

Icons
Touch to open apps and shortcuts.

Answer phone
Touch to open messages window.

Call
Touch to open number keypad.

Menu
Press to open app options and settings.

Apps / Launcher
Touch to open app screen.

Home
Press to return to home screen or press and hold to see recent apps.

Wi-Fi
Shows Wi-Fi signal strength.

Battery level

DECT
Shows DECT signal strength.

Contacts
Touch to access your contact and calls log, view favourites and make calls.

Internet browser
Touch to open browser.

Pages
Touch to show additional home screens.

Back
Press to close the keyboard or return to previous screen or app.

5 Use your phone

How to use the touch screen

Touch once to open a menu, start an app or confirm something.

Slide left, right, up or down to scroll lists or screens.


Pinch two fingers together or spread them apart to zoom in or out on an image.


Touch and hold icons for extra options.


Rotate the handset for landscape view in certain apps.




Main menu, internet browsing and apps download


Press the  key to return to the home screen or wake up your handset.

Touch the  icon to browse the internet.

Touch the  icon to see a list of your apps. Scroll down to see more.

To download new apps on your SmartPhone touch  on the home screen, then **Opera Mobile Store**.

Make a call

1 Touch the  icon.



2 Enter number.

You can also dial from the calls log or contacts screens.



3 Touch the  icon to call.




Take a call

1 The phone rings and calling screen shows.



2 Pick up the handset from the charger to answer calls.

If it's not in the charger, then slide the  icon to the right.



During a call

Touch **Mute** if you don't want your caller to hear you, or **Speaker** for handsfree mode.


 


A green bar will show when these keys are active.

End a call

1 Touch the  icon.



2 The call is ended.

Whilst on a call you can still navigate between screens and apps by pressing the  or  keys. You can return to your call by touching the  icon on the home screen. You'll need to press  to end your phone call.

6 Using the answer phone


1 Message icon shows.




2 Touch the Answer Phone icon.




3 The screen shows who's called.


 

 
Press  to play the first new message.

Press  to play the next message.

Press  to play the previous message.

Press  to pause playback.



Touch , then the  key, then **Outgoing message** to play, change or delete your outgoing message. Touch the , then the  key, then **Settings** to set up remote access or change answer delay, recording quality or answer mode.

General Information

For information on safety instructions, cleaning, technical information or connecting to a switchboard, please see the 'General Information' section in the full user guide at bt.com/producthelp.

Guarantee

Your BT Home SmartPhone is guaranteed for 12 months from the date of purchase.

Subject to the terms listed below, the guarantee will provide for the repair of, or at BT's or its agent's discretion, the option to replace the BT Home SmartPhone or any of its components, (other than batteries), which are identified as faulty or below standard, or as a result of inferior workmanship or materials. Products over 28 days old from the date of purchase may be replaced with a refurbished or repaired product.

The conditions of this guarantee:

- the guarantee shall apply only to defects that happen within the 12-month guarantee period
- you'll need proof of purchase
- you return the equipment to BT or its agent as instructed

This guarantee doesn't cover any faults or defects caused by accidents, misuse, fair wear and tear, neglect, tampering with the equipment, or any attempt at adjustment or repair other than through approved agents.

This guarantee does not affect your statutory rights.

To find out what to do if your phone is in or outside of the 12-month guarantee, please see the full user guide at bt.com/producthelp.

How to recycle your equipment

The symbol shown here and on the product means that the product is classed as electrical or electronic equipment, so DO NOT put it in your normal rubbish bin.



It's all part of the Waste Electrical and Electronic Equipment (WEEE) Directive to recycle products in the best way – to be kinder to the planet, get rid of dangerous things more safely and bury less rubbish in the ground.

You should contact your retailer or supplier for advice on how to dispose of this product in an environmentally friendly way.

Emergency calls

You won't be able to call 999 from this phone if there's a power cut, so make sure you've got another way to call for help in an emergency.

R&TTE Directive & Declaration of Conformity

This product is intended for use within the UK for connection to the public telephone network and compatible switchboards.

This equipment complies with the essential requirements for the Radio Equipment and Telecommunications Terminal Equipment Directive (1999/5/EC).

For a copy of the Declaration of Conformity, go to bt.com/producthelp.

Information

You should only use the adaptors, cables and battery supplied (3.7v 1400 mAh Li-ion Polymer) with this product otherwise it may not work.

If you need to remove the battery, use your fingernail to ease the rear cover off, starting at the bottom of the handset and working your way round. Then take the battery out. Any replacement rechargeable battery must be of the same type. BT accepts no responsibility for damage caused by the use of any other type of battery.

Your Home SmartPhone is set to allow unknown sources so that you can download apps from the Opera Mobile Apps store. BT does not accept responsibility for any loss or damage that may be caused to your phone or personal data as a result. This setting can be changed in Application settings.

This product uses open source codes available from bt.com/help/gplcode



Offices worldwide

Products and services we've described in this publication may not always be available and we may change them. Nothing we've written here is contractual. When we supply services and equipment, our terms and conditions apply.

© British Telecommunications plc 2013
Registered office: 81 Newgate Street, London EC1A 7AJ
Registered in England No. 1800000

BT Home SmartPhone (02/13) Issue 1
Written and designed by The Art & Design Partnership
and Muse Publishing.

Printed in China.



* Calls to our helpdesk made from UK landlines are free. Mobile call charges may vary.